



# NVIDIA Quadro Professional Drivers ***Release 160 Notes***

**Version 160.02**

For Windows XP / 2000

Windows XP Professional x64 Edition

Windows Server 2003 x64 Edition

---

**NVIDIA Corporation**

**May 10, 2007**

## Confidential Information

Published by  
NVIDIA Corporation  
2701 San Tomas Expressway  
Santa Clara, CA 95050

### Notice

ALL NVIDIA DESIGN SPECIFICATIONS, REFERENCE BOARDS, FILES, DRAWINGS, DIAGNOSTICS, LISTS, AND OTHER DOCUMENTS (TOGETHER AND SEPARATELY, "MATERIALS") ARE BEING PROVIDED "AS IS." NVIDIA MAKES NO WARRANTIES, EXPRESSED, IMPLIED, STATUTORY, OR OTHERWISE WITH RESPECT TO THE MATERIALS, AND EXPRESSLY DISCLAIMS ALL IMPLIED WARRANTIES OF NONINFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE.

Information furnished is believed to be accurate and reliable. However, NVIDIA Corporation assumes no responsibility for the consequences of use of such information or for any infringement of patents or other rights of third parties that may result from its use. No license is granted by implication or otherwise under any patent or patent rights of NVIDIA Corporation. Specifications mentioned in this publication are subject to change without notice. This publication supersedes and replaces all information previously supplied. NVIDIA Corporation products are not authorized for use as critical components in life support devices or systems without express written approval of NVIDIA Corporation.

### Trademarks

NVIDIA, the NVIDIA logo, 3DFX, 3DFX INTERACTIVE, the 3dfx Logo, STB, STB Systems and Design, the STB Logo, the StarBox Logo, NVIDIA nForce, GeForce, NVIDIA Quadro, NVDVD, NVIDIA Personal Cinema, NVIDIA Soundstorm, Vanta, TNT2, TNT, RIVA, RIVA TNT, VOODOO, VOODOO GRAPHICS, WAVEBAY, Accuvision Antialiasing, the Audio & Nth Superscript Design Logo, CineFX, the Communications & Nth Superscript Design Logo, Detonator, Digital Vibrance Control, DualNet, FlowFX, ForceWare, GIGADUDE, Glide, GOFORCE, the Graphics & Nth Superscript Design Logo, Intellisample, M-BUFFER, nfiniteFX, NV, NVChess, nView, NVKeystone, NVOptimizer, NVPinball, NVRotate, NVSensor, NVSync, the Platform & Nth Superscript Design Logo, PowerMizer, Quincunx Antialiasing, Sceneshare, See What You've Been Missing, StreamThru, SuperStability, T-BUFFER, The Way It's Meant to be Played Logo, TwinBank, TwinView and the Video & Nth Superscript Design Logo are registered trademarks or trademarks of NVIDIA Corporation in the United States and/or other countries. Other company and product names may be trademarks or registered trademarks of the respective owners with which they are associated.

Intel, Indeo, and Pentium are registered trademarks of Intel Corporation. Microsoft, Windows, Windows NT, Windows Vista, Direct3D, DirectDraw, and DirectX are trademarks or registered trademarks of Microsoft Corporation. OpenGL is a registered trademark of Silicon Graphics Inc. PCI Express, PCI-SIG, and the PCI-SIG design marks are registered trademarks and/or service marks of PCI-SIG.

Other company and product names may be trademarks or registered trademarks of the respective owners with which they are associated.

### Copyright

© 2007 by NVIDIA Corporation. All rights reserved.



# Table of Contents



## 1. Introduction to Release 160

### Notes

Structure of the Document . . . . . 1  
 Changes in this Edition . . . . . 1

## 2. Changes in the Release 160

### Driver for Windows XP

Version 160.02 Highlights . . . . . 4  
 What's New in Version 160.02 . . . . . 4  
 Changes in Version 160.02 . . . . . 5  
 Fixed Issues—Windows XP 32-bit . . . . . 5  
 Fixed Issues—Windows XP x64 . . . . . 7  
 Open Issues in Version 160.02 . . . . . 8  
 NVIDIA Recommendations . . . . . 8  
 NVIDIA Issues—Single GPU . . . . . 9  
 NVIDIA Issues—SLI Mode . . . . . 11  
 Known Product Limitations . . . . . 12  
 SLI Connector Requirement on NVIDIA Quadro  
 SLI Cards . . . . . 12  
 DVD Playback Issues with Dual NVIDIA Quadro  
 NVS Cards . . . . . 13  
 PowerDVD 5.0 Does Not Display Correctly in  
 nView Span Mode . . . . . 13  
 DirectX Fails When Detaching/Reattaching  
 Displays in Dualview Mode . . . . . 13  
 OpenGL Viewport Scaling Problem in Horizontal  
 Span Mode . . . . . 13  
 Driver Reports 256 MB Memory on NVIDIA  
 Quadro FX 330 Cards . . . . . 14  
 Video Playback in nView Clone and Span  
 Modes . . . . . 14  
 Monitor Ordering in the Windows Settings Page  
 14  
 Applying Workstation Application Profiles . . 16  
 No Antialiasing of 3DMark03 Image Quality  
 Screen Captures . . . . . 16  
 Medal of Honor Under Windows XP / Windows  
 2000 . . . . . 17  
 Windows XP/2000 Issue with Settings Tab  
 Monitor Positioning . . . . . 17  
 Antialiasing Problems With Certain Applications  
 17  
 Poor Quality S-Video Output on Some TVs . 18  
 AGP and PCI-E Programs May Hang With AMD  
 K7 and K8 Processors . . . . . 18

Desktop Manager Does Not Re-Center Logon  
 Screen . . . . . 19  
 Issues with Video Mirror—Windows XP/2000 19

## 3. The Release 160 Driver for Windows XP

Hardware and Software Support . . . . . 21  
 Supported Operating Systems . . . . . 21  
 Supported NVIDIA Products . . . . . 22  
 Supported Languages . . . . . 23  
 Driver Installation . . . . . 24  
 System Requirements . . . . . 24  
 Installation Instructions . . . . . 24  
 NVIDIA Driver History . . . . . 27

### A. Mode Support for Windows

General Mode Support Information . . . . . 30  
 Default Modes Supported by GPU for Windows XP  
 31  
 Understanding the Mode Format . . . . . 31  
 NVIDIA Quadro FX Family of High End GPUs .  
 32  
 Modes Supported by DACs and TV Encoders . 39  
 External DAC Mode Support . . . . . 39  
 TV-Out Mode Support . . . . . 40



# **Table of Contents**



## CHAPTER

## 1

# INTRODUCTION TO *RELEASE 160 NOTES*

This edition of *Release 160 Notes* describes the Release 160 ForceWare Graphics Drivers and provides information applicable to all NVIDIA drivers. NVIDIA provides these notes to enable add-in-card (AIC) producers and original equipment manufacturers (OEMs) to monitor performance improvements and bug fixes in each documented version of the driver.

## Structure of the Document

---

This document is organized in the following sections:

- [“Changes in the Release 160 Driver for Windows XP” on page 3](#) gives a summary of changes, and fixed and open issues in this version.
- [“The Release 160 Driver for Windows XP” on page 21](#) describes the NVIDIA products and languages supported by this driver, the system requirements, and how to install the driver.
- [“Mode Support for Windows” on page 29](#) lists the default resolutions supported by the driver.

## Changes in this Edition

---

This edition of the *Release 160 Notes* for Windows Vista includes information about NVIDIA ForceWare graphics driver version 160.02, and lists changes made to the driver since version 91.85 and 97.78. These changes are discussed beginning with the chapter [“Changes in the Release 160 Driver for Windows XP” on page 3](#).



## CHAPTER

## 2

# CHANGES IN THE RELEASE 160 DRIVER FOR WINDOWS XP

This chapter describes open issues for version 160.02, and resolved issues and driver enhancements for versions of the Release 160 driver up to version 160.02. The chapter contains these sections:

- “Version 160.02 Highlights” on page 4
- “Changes in Version 160.02” on page 5
- “Open Issues in Version 160.02” on page 8
- “Known Product Limitations” on page 12

## **Version 160.02 Highlights**

---

This section provides highlights of version 160.02 of the NVIDIA Release 160 Driver.

### **What's New in Version 160.02**

---

#### **Resolved Issues for Windows Vista**

See [“Changes in Version 160.02” on page 5](#) for a list of resolved issues.



## Changes in Version 160.02

---

The following sections list the changes made and issues resolved since driver version 91.85 and 97.78.

- “Fixed Issues–Windows XP 32-bit” on page 5
- “Fixed Issues–Windows XP x64” on page 7

The NVIDIA bug number is provided for reference.

### Fixed Issues–Windows XP 32-bit

---

- Added Delcam application profile.
- Added Abaqus application profile.
- Added HiCAD application profile.
- Added Cimatron E application profile.
- Added Cast Software application profile.
- Updated AliasSTUDIO application profile.
- Updated ANSYS application profile–V-Sync is turned off.
- There is a major performance degradation when using the I-DEAs profile compared to other CAD application profiles.
- OpenGL application windows do not update properly when moved to the second dual-screen display.
- In a dual-screen setup, the refresh of OpenGL application windows are off by one from one screen to the other.
- Rendemonkey–blue screen crash occurs when opening the occlusion mapping sample.
- The NVIDIA command line V-Sync on/off control API does not work (`rundll32.exe NvCpl.dll, setvsync on (or off)`).
- Avid Marquee–shadows and digital video effects (DVE) are not rendered properly.
- Opticore–there is corruption on transparent surfaces at some camera-view angles.

- ABAQUS—with overlay mode enabled, vertex arrays (circle, arc, or b-spline) are rendered as black.
- NVIDIA Quadro FX 4600/5600: After Effects CS3—Alpha Test is ignored when generating the shadow map.
- NVIDIA Quadro FX 4000: PC-DMIS—the application responds slowly when using the Microsoft MoveWindow() API call, such as when repainting text box windows.

## Fixed Single-GPU Issues

- NVIDIA Control Panel->Workstation-> Frame Sync: Two Servers can appear on the same system after switching between dual and single display modes.
- Memory clocks displayed do not reflect DDR multiplier.  
*The memory clocks themselves are running at the correct speeds.*
- Windows XP: The system crashes after enabling NVKeystone with antialiasing enabled.
- The Windows taskbar sometimes overlays over an applications's title bar.
- NVIDIA Quadro FX 4500: Under DVI + DVI Dualview mode, the secondary DVI display turns blank after disconnecting the primary DVI display.
- NVIDIA Quadro FX 4500, NVIDIA Control Panel: When enabling nView Clone mode for the first time, each monitor is set to a different resolution.
- NVIDIA Quadro FX 4400: After changing the color settings from the NVIDIA Control panel, the settings revert to the default.
- NVIDIA Quadro FX 1500: The NVIDIA Control Panel crashes when you attempt to launch it by right-clicking the desktop.
- NVIDIA Quadro FX 540, GeForce 6200 with TurboCache: DVD playback problems occur when viewing at low resolutions.
- NVIDIA Quadro NVS 440: NVIDIA control panel error occurs while switching between nView Spanning and Dualview mode with Keystone activated.

- Dual NVIDIA Quadro FX 4600: Changes made to the NVIDIA Control Panel Advanced 3D Image Settings do not take effect.
- NVIDIA Quadro FX 4600: Desktop Overlap feature is missing.

## Fixed SLI-Mode Issues

- [SLI], NVIDIA Quadro FX 4500: With two displays connected, in the NVIDIA Control Panel-> 3D Settings-> Set SLI Configuration page, the “Select the display to view SLI rendered content on” combo box sometimes shows more than two displays.
- [SLI], NVIDIA Quadro FX 4600: OpenGL applications crash after resuming from Standby or Hibernate mode.

## Fixed Issues—Windows XP x64

---

- Added Delcam application profile.
- Added Abaqus application profile.
- Added IDS HiCAD application profile.
- Added Cimatron E application profile.
- Updated AliasSTUDIO application profile.
- Updated ANSYS application profile—V-Sync is turned off.
- ABAQUS—with overlay mode enabled, vertex arrays (circle, arc, or b-spline) are rendered as black.
- SolidWorks—on the first active session after system reboot and with nView Desktop Manager enabled, the SolidWorks application hangs when moving the mouse cursor over task pane tabs.
- NVIDIA Quadro FX 4600: Bentley Microstation—artifacts are left on the screen when moving CAD objects and dialog boxes.
- NVIDIA Quadro FX 540: DVD playback problems occur when viewing the video at low resolutions.

## Open Issues in Version 160.02

---

As with every released driver, version 160.02 of the Release 160 driver has open issues and enhancement requests associated with it. This section includes lists of issues that are either not fixed or not implemented in this version. Some problems listed may not have been thoroughly investigated and, in fact, may not be NVIDIA issues. Others will have workaround solutions.

They are listed in the following sections:

- “NVIDIA Recommendations” on page 8
- “NVIDIA Issues—Single GPU” on page 9
- “NVIDIA Issues—SLI Mode” on page 11

### NVIDIA Recommendations

---

- Single display modes such as TV only, DFP/LCD only or CRT only provide the best performance and quality from Windows Media Center Edition.

*Dual display modes such Dualview and nView Clone and Span modes are not recommended.*

- When using the trial version of WinDVD 6 from InterVideo.com, you may experience TV or DVD playback problems in Windows Media Center if you change resolutions during video playback. This is most often seen when switching from windowed to full screen mode.

*This problem does not occur with the latest full OEM versions of WinDVD or with other Windows Media Center qualified DVD decoders.*

- If you perform a clean driver installation (no previous NVIDIA drivers installed), **you must reboot your computer**. If you do not reboot, the predefined application profiles will not be activated and you may experience application stability problems.

## NVIDIA Issues—Single GPU

---

This section includes issues that occur under the Windows XP or Windows 2000:

- The NVIDIA Control Panel Run Display Optimization Wizard back button does not work.
- DVI display is blurry with normal display timing settings.  
*The blurriness does not occur if "Treat as HDTV" is selected and then CMT advanced timings are used.*
- NVIDIA Control Panel->Workstation-> Frame Sync: The View Status Page does not detect which is the first and which is the second display attached to the GPU.
- NVIDIA Control Panel Category Pages: Foreign language text exceeds the boundary of category windows.
- There may be intermittent application compatibility issues with dual core CPUs.

*If you experience this issue, you can work around it by toggling off multi-thread optimizations using the following instructions:*

- 1 Launch **regedit** and determine the current primary display card by looking in

```
HKey_Local_Machine\Hardware\DeviceMap\Video
```

and note the GUID (global unique identifier assigned by Windows), which is the long string in brackets { } at the end of the entry

```
"\device\video0".
```

- 2 Look in

```
HKey_Local_Machine\SYSTEM\CurrentControlSet\Control\Video\{GUID}\0000
```

where {GUID} is the number derived from the previous step.

- 3 Open the "0000" directory and create a new DWORD called **OpenGL\_ThreadControl** and give it a value of **2**.

This will disable multithreading in the driver for all OpenGL applications.

- 4 If you want to disable driver multithreading for all Direct3D applications—  
In the same "0000" directory, create a new DWORD called **WTD\_EXECMODEL** and give it a value of **0**.

- All GPUs: When adding Custom Resolutions, the user is not allowed to select the "monitor scaling" option.

- Video color-space range for DVI-only<sup>1</sup> outputs is erroneously set to standard mode (16-235) instead of extended mode (0-255).

*A new detection feature to apply Standard CSC mode to TV outputs (including NTSC, PAL, 480i, and 576i), included DVI-only outputs by mistake.*

**Note:** *The driver correctly applies extended mode to analog outputs, and standard mode to TV outputs (including NTSC, PAL, 480i, and 576i).*

*A future driver release will correct this and apply the extended-mode color space to DVI-only outputs.*

*You can work around this issue by forcing either standard or extended mode as follows:*

- 1 Launch **regedit** and determine the current primary display card by looking in

`HKey_Local_Machine\Hardware\DeviceMap\Video`

and note the GUID (global unique identifier assigned by Windows), which is the long string in brackets { } at the end of the entry

`"\device\video0"`.

- 2 Look in

`HKey_Local_Machine\SYSTEM\CurrentControlSet\Control\Video\{GUID}\0000`

where {GUID} is the number derived from the previous step.

- 3 Open the "0000" directory and create a new DWORD called **VMRCCSStatus** and give it a value of

**0x3** - to force use of the standard YUV range of 16-235

**0x1** - to force use of the extended YUV range of 0-255

- Workstation 3D Stereo: After enabled 3D stereo "Force stereo stuttering" and then closing an OpenGL application, the desktop shows corruption.
- NVIDIA Quadro SDI: When using the APIs, the dual-single-link output doesn't match the single-link-output.

1. "DVI-only" means only one display is connected, and it is to the DVI output.

## **NVIDIA Issues—SLI Mode**

---

This section includes SLI technology related issues that occur under the Windows XP and Windows 2000:

- [SLI], NVIDIA Quadro FX5500: With SLI mode enabled, GPU load balancing does not work with AutoCAD 2007.
- [SLI]: With SLI mode enabled, the NVIDIA Control Panel->Workstation->View Status page does not the correct monitor connections.

## Known Product Limitations

---

This section describes problems that will not be fixed. Usually, the source of the problem is beyond the control of NVIDIA. Following is the list of problems and where they are discussed in this document:

- “SLI Connector Requirement on NVIDIA Quadro SLI Cards” on page 12
- “DVD Playback Issues with Dual NVIDIA Quadro NVS Cards” on page 13
- “PowerDVD 5.0 Does Not Display Correctly in nView Span Mode” on page 13
- “DirectX Fails When Detaching/Reattaching Displays in Dualview Mode” on page 13
- “OpenGL Viewport Scaling Problem in Horizontal Span Mode” on page 13
- “Driver Reports 256 MB Memory on NVIDIA Quadro FX 330 Cards” on page 14
- “Video Playback in nView Clone and Span Modes” on page 14
- “Monitor Ordering in the Windows Settings Page” on page 14
- “Applying Workstation Application Profiles” on page 16
- “No Antialiasing of 3DMark03 Image Quality Screen Captures” on page 16
- “Medal of Honor Under Windows XP / Windows 2000” on page 17
- “Windows XP/2000 Issue with Settings Tab Monitor Positioning” on page 17
- “Antialiasing Problems With Certain Applications” on page 17
- “Poor Quality S-Video Output on Some TVs” on page 18
- “AGP and PCI-E Programs May Hang With AMD K7 and K8 Processors” on page 18
- “Desktop Manager Does Not Re-Center Logon Screen” on page 19
- “Issues with Video Mirror–Windows XP/2000” on page 19

### **SLI Connector Requirement on NVIDIA Quadro SLI Cards**

---

The SLI connector that links two SLI cards is needed for proper SLI operation. However, the connector can be removed if you do not intend to enable SLI mode. If you remove the connector, then you must make sure that SLI mode is disabled from the NVIDIA control panel. Enabling SLI mode without the SLI connector installed will result in video corruption.



## DVD Playback Issues with Dual NVIDIA Quadro NVS Cards

---

With both AGP and PCI NVIDIA Quadro NVS cards installed in the system, when attempting to play DVDs in full-screen mode on the display connected to the PCI card, the screen is blank.

*This is not an NVIDIA bug, but rather a problem with older point releases of PowerDVD and WinDVD.*

## PowerDVD 5.0 Does Not Display Correctly in nView Span Mode

---

With nView Horizontal Span mode enabled, when the PowerDVD 5.0 playback window is dragged to the second display and then stretched to fill the display, the right area of the display is corrupted.

*This is not an NVIDIA bug, but a problem with PowerDVD.*

## DirectX Fails When Detaching/Reattaching Displays in Dualview Mode

---

This problem can be duplicated as follows:

- 1 Enable both displays in Dualview mode.
- 2 Detach monitor 2 and apply settings.
- 3 Reattach monitor 2 and apply settings.

DirectX runtime fails on monitor 1.

*This is not an NVIDIA bug, but a limitation in the operating system where DirectX does not enumerate the second device. DirectX can be restored to both displays by rebooting the system*

## OpenGL Viewport Scaling Problem in Horizontal Span Mode

---

With nView Horizontal Span mode enabled, when opening an OpenGL model in a viewport, the model image is scaled too large to fit in the viewport. The problem occurs with such applications as Maya 5.0 and 3D Studio MAX 4.26.

*This is not an NVIDIA bug, but a limitation in the application's ability to properly maintain the aspect ratio in Horizontal Span mode.*

## Driver Reports 256 MB Memory on NVIDIA Quadro FX 330 Cards

---

- **Problem**

When a 64 MB NVIDIA Quadro FX 330 card is installed, the driver reports that the card needs 256 MB, causing 256 MB of address space to be consumed.

- **Explanation**

*This is not a bug but a product limitation.*

The NVIDIA Quadro FX 330 GPU has some limitations that prevent the card from addressing less than 256 MB of system memory.

## Video Playback in nView Clone and Span Modes

---

- **Problem**

With nView Clone or Span mode enabled, video playback appears on only one display under the following conditions:

- Under nView Clone mode, when full-screen video mirror is not used.
- Under nView Span mode, when full-screen video mirror is not used and the video is positioned to span across both monitors.

- **Explanation**

With applications that render using the hardware overlay—such as DirectX applications—the default driver behavior is to enable the hardware overlay when nView Clone or Span mode is enabled.

*Because the driver supports only one hardware overlay, the video appears on only one display.*

## Monitor Ordering in the Windows Settings Page

---

### Monitor Ordering on a Single GPU

- **Issue**

The monitor order in the Display Properties Settings page is not consistently matched with the connectors on the graphics card.

- **Explanation**

The driver does not distinguish connector positions, but instead distinguishes the display type, and consequently assigns monitor numbers according to the display type and not according to the connector.

## Monitor Ordering on a Multiple GPU System

- **Issue**

When four monitors are connected to a system with multiple PCI GPUs, such as a NVIDIA Quadro NVS 400 graphics card, and enabled in Dualview mode, many customers expect the monitor ordering in the Display Properties Settings page to conform to the following:

Connector Position	Monitor Number
Primary GPU—Output 1	1
Primary GPU—Output 2	2
Secondary GPU—Output 1	3
Secondary GPU—Output 2	4

The monitor ordering, in fact, does not conform to this scheme.

- **Explanation**

The monitor ordering is not controlled by the driver, but rather by the Windows OS method of enumerating PCI devices. The Windows enumeration results in the following monitor numbering:

Connector Position	Monitor Number
Primary GPU—Output 1	1
Secondary GPU—Output 1	2
Primary GPU—Output 2	3
Secondary GPU—Output 2	4

**Considerations for nView Span Modes:** Outputs from the same GPUs are grouped together in nView Span modes, resulting in the desktop spanning across monitors 1 and 3, or across 2 and 4.

## Applying Workstation Application Profiles

---

- **Application Profiles Should be Used**

The workstation application profiles are software settings used by the NVIDIA Display Drivers to provide optimum performance when using a selected application. The profile also works around known application issues and bugs.

If there is an available setting for an application, it should be used, otherwise incorrect behavior or reduced performance is likely to occur.

- **Applying Application Profiles**

If you make a configuration change while the application is open, you must exit and then re-open the application for the change to take effect.

When an application is running it does not receive notification of configuration changes.

## No Antialiasing of 3DMark03 Image Quality Screen Captures

---

- **Problem**

After enabling antialiasing from the NVIDIA Properties page, 3DMark03 screen captures—obtained using the application’s screen capture function—might not be antialiased.

- **Explanation**

This is not an NVIDIA bug, but rather a result of different methods used to render antialiased images.

Depending on a combination of factors, the driver may take advantage of the NVIDIA hardware’s ability to bypass the front buffer while rendering an antialiased image. In this case, the front buffer does not contain antialiased data, so if an application takes data from the front buffer—as is the case with 3DMark03’s Image Quality screen captures—then the resulting image is not antialiased.

To accommodate applications that request use of the front buffer, the NVIDIA software can provide the antialiased data in a buffer to the application. Since this negates the advantages of the NVIDIA hardware capability, this support is enabled only when antialiasing is enabled within the application, and not from the NVIDIA control panel.

*In all cases when antialiasing is enabled, screen images as well as screen captures obtained using the Print Screen key are always antialiased.*

## Medal of Honor Under Windows XP / Windows 2000

---

- **Problem**

The Electronic Arts game Medal of Honor uses a hard coded buffer to parse the OpenGL extension string. This can cause a system crash under Windows XP and Windows 2000.

- **Workaround**

NVIDIA has implemented Medal of Honor application detection to work around this extension string crash.

## Windows XP/2000 Issue with Settings Tab Monitor Positioning

---

- **Problem**

In the Windows **Display Properties > Settings** tab, the secondary monitors cannot be positioned directly above monitor #1 without snapping horizontally to a position diagonal to monitor #1.

- **When the Problem Occurs**

The problem occurs when four monitors are connected to the graphics adapter card, but only two of them are enabled.

- **Cause and Workaround**

This is a Microsoft—not an NVIDIA—bug, and there is no workaround to correct the positioning of the monitor icons. However, the actual positioning of the displays on the desktop can be corrected using the nView Desktop Manager window as follows:

- 1 Under the Tools tab in the Desktop Manager windows, make sure Automatically Align Displays is checked.
- 2 In the Settings tab, position the appropriate monitor icon above monitor #1, then click **Apply**.

The mouse cursor movement between monitor desktops will correspond to a vertical orientation of the monitors, even though the monitor icons in the Settings tab are diagonal to each other.

**Note:** This will be the case even if the monitor icons are deliberately positioned diagonal to each other.

## Antialiasing Problems With Certain Applications

---

Antialiasing in the NVIDIA Direct3D driver requires each new frame to be rendered from scratch. This requirement adversely affects applications that render only that portion of the content that has changed since the last frame. A common symptom of this problem is geometric structures that incorrectly disappear and re-appear as the scene shifts.

## Poor Quality S-Video Output on Some TVs

---

NVIDIA drivers differentiate an S-video TV from a composite TV by searching for 75-Ohm loads on the chrominance and luminance lines. If the driver detects only one such load, it assumes that it has a composite TV and drives both chroma and luma onto that line. This approach allows both types of TV to display in color.

Unfortunately, some S-video TVs do not apply the correct load to both lines, causing the driver to detect an S-video TV as a composite. The driver, in turn, sends the lower quality signal to the S-video TV. To work around this problem, use the Control Panel to override the **Auto-select** feature. This can be done following these steps:

- 1 In the **Settings** tab of the **Display Properties** Control Panel, click **Advanced**.
- 2 In the **nView** tab, click **Device Settings** and click **Select Output Device**.
- 3 In the **Device Selection** tab, click the **TV** option.
- 4 Change the **Video output format** to **S-video**.

## AGP and PCI-E Programs May Hang With AMD K7 and K8 Processors

---

- **Issue**

Microsoft® Windows® 2000 and Windows XP systems using AMD K7 and K8 processors can hang when an AGP or PCI-E program is used.

- **Root Cause**

There is a known problem with Microsoft® Windows® 2000 and Windows XP systems using AMD K7 and K8 CPUs that results in the Microsoft operating system allocating overlapping 4M cached pages with 4k write-combined pages. This condition results in undefined behavior and data corruption, and is explicitly disallowed by the AMD CPU manual.

This problem can affect any device driver in the system that allocates write-combined system memory, but is usually most easily reproduced with graphics drivers since graphics drivers generally make heavy use of write-combined system memory for performance reasons.

- **Resolution**

Microsoft has a knowledge base article on the issue, the text of which is unfortunately quite outdated. While the article only mentions Windows 2000, AGP, and K7, both the root cause and resolution also apply to Windows 2000 or Windows XP, AGP or PCI-E, and AMD K7 or K8. The article can be found at <http://support.microsoft.com/?id=270715>.

The issue is resolved by applying an operating system registry key as described in the referenced article that instructs the Microsoft operating system to not use the 4M pages, thus avoiding the conflict.

The registry key is automatically applied by installation of the latest NVIDIA nForce platform driver package (including 4.57 SMBUS or later). It is imperative for the package to be installed or for the registry key to be applied

before the NVIDIA graphics driver or any other device drivers are installed. The registry key takes effect only after an operating system reboot.

## **Desktop Manager Does Not Re-Center Logon Screen**

On Windows XP multi-display systems that are set to nView Span mode, the Windows logon screen is centered on the extended desktop. This usually causes it to be split across two displays, which users may find annoying. Although users can normally use the Desktop Manager to restrict a window's appearance to one display, security restrictions in the operating systems prevent this in the case of the logon screen.

## **Issues with Video Mirror—Windows XP/2000**

Table 2.1 lists current known issues with NVIDIA Video Mirror functionality.

**Table 2.1** Known Issues with Video Mirror

Video Mirror is not yet implemented for applications using Video Port Extensions (VPE).
If Video Mirror is enabled but a full-screen display does not appear, one of the following problems may have occurred:
Video Mirror can only function when overlay is being used. The video player may not be able to create an overlay if another application is using the overlay, or the desktop display resolution is too high. You can lower the desktop resolution, pixel depth, or refresh rate.
Video Mirror requires some extra memory to run. Try closing other DirectX or OpenGL applications that may be running.
You may need to close and restart your video application for Video Mirror enabling or disabling to take effect.
Some video players that cannot detect the presence of Video Mirror stop playing if they are minimized or completely obscured by another window. For example, Media Player can exhibit this problem.





## CHAPTER

## 3

# THE RELEASE 160 DRIVER FOR WINDOWS XP

This chapter covers the following main topics:

- “Hardware and Software Support” on page 21
- “Driver Installation” on page 24
- “NVIDIA Driver History” on page 27

## Hardware and Software Support

---

### Supported Operating Systems

---

This Release 160 driver includes drivers designed for the following Microsoft® operating systems:

- Microsoft Windows® XP
  - Windows XP Professional
  - Windows XP Home Edition
  - Windows XP Professional x64 Edition
- Microsoft Windows Server 2003 x64 Edition
- Microsoft Windows 2000

## Supported NVIDIA Products

Table 3.1 lists the NVIDIA GPUs supported by this Release 160 driver.

**Table 3.1** Supported NVIDIA Workstation Products

<b>Product</b>	<b>Windows XP 32-bit Windows 2000</b>	<b>Windows XP Professional x64</b>
NVIDIA Quadro FX 5600	X	X
NVIDIA Quadro FX 5500 SDI	X	X
NVIDIA Quadro FX 5500	X	X
NVIDIA Quadro FX 4600	X	X
NVIDIA Quadro FX 4500 X2	X	X
NVIDIA Quadro FX 4500	X	X
NVIDIA Quadro FX 4500 SDI	X	X
NVIDIA Quadro FX 4400	X	X
NVIDIA Quadro FX 4400G	X	X
NVIDIA Quadro FX 4000	X	X
NVIDIA Quadro FX 4000 SDI	X	X
NVIDIA Quadro FX 3500	X	X
NVIDIA Quadro FX 3450	X	X
NVIDIA Quadro FX 3400	X	X
NVIDIA Quadro FX 1500	X	X
NVIDIA Quadro FX 1400	X	X
NVIDIA Quadro FX 560	X	X
NVIDIA Quadro FX 550	X	X
NVIDIA Quadro FX 540	X	X
NVIDIA Quadro FX 350	X	X
NVIDIA Quadro NVS 440	X	X
NVIDIA Quadro NVS 285 PCI-E	X	X

## Supported Languages

---

The Release 160 ForceWare Graphics Drivers supports the following languages in the main driver Control Panel:

English (USA)	German	Portuguese (Euro/Iberian)
English (UK)	Greek	Russian
Arabic	Hebrew	Slovak
Chinese (Simplified)	Hungarian	Slovenian
Chinese (Traditional)	Italian	Spanish
Czech	Japanese	Spanish (Latin America)
Danish	Korean	Swedish
Dutch	Norwegian	Thai
Finnish	Polish	Turkish
French	Portuguese (Brazil)	

# Driver Installation

---

## System Requirements

---

The hard disk space requirement is minimum 62.9 MB for English-only, and 79 MB for International.

## Installation Instructions

---

### Before You Begin

- If you do not have System Administrator access privileges, it is assumed that the appropriate person with System Administrator access in your organization will set up and install the NVIDIA graphics driver software on your computer.
- The installation process copies all necessary files for operation into the appropriate directories.
- The nView system files are copied to your **Windows\System** directory.
- nView Desktop Manager Profile files (\*.tvp) are saved in the **Windows\Nview** directory.

Depending on the version of the NVIDIA driver previously installed, profiles may also be located in the **Documents and Settings\All Users\Application Data\nView\_Profiles** directory.

- As part of the install process, an uninstall is registered in your system.
- Under Windows XP, the NVIDIA driver is installed in “Dualview mode” display. However, note that the second display is not activated by default, but must be enabled.

## Preserving Settings Before Upgrading Your Software

Before uninstalling or installing software, you can preserve your nView Desktop Manager and/or NVIDIA Display settings by using the nView Desktop Manager Profiles features.

**Note:** Follow the steps below and/or refer to the *NVIDIA nView Desktop Manager User's Guide* for details. Under Windows XP/2000 and Windows NT 4.0, you must have, at least, **Power User** access privileges in order to create or save a profile. (Refer to Windows Help if you need an explanation of Power User access rights.)

Follow the steps below and/or refer to the *NVIDIA nView Desktop Manager User's Guide* for details.

- 1 Open the nView Desktop Manager Profiles page (Figure 4.1).
- 2 To preserve your current settings, you can use either the **Save** or the **New** option from the nView Desktop Manager Profiles page:
  - If you want to overwrite the currently loaded profile with your changed settings, use the **Save** option. Notice that a warning message indicates that you are about to overwrite the selected profile.
  - If you want to retain the currently loaded profile and want to save your changed settings to a new file, click the **New** option. Enter a name and description of the profile in the New Profile dialog box. For example, you can name this profile **My Settings**.
- 3 If you are an “advanced” user and want to customize certain settings in the saved profile, click **Advanced** << to expand the dialog box (Figure 4.2).
- 4 To customize the settings, you can select or clear any of the settings check boxes.
- 5 Click **Save** to return to the main Profiles page.

If you created a new profile, you will see the name of the newly created profile in the profiles list.

If you overwrote a current profile, the same profile name is retained in the list.

**Note:** nView Desktop Manager profile (.tvp) files are saved in the **Windows\nView** directory. Depending on the version of the NVIDIA driver previously installed, profiles may also be saved in the **Documents and Settings\All Users\Application Data\ nView\_Profiles** directory.

- 6 Now you can uninstall your current driver for a driver upgrade.
- 7 After you restart your computer following an NVIDIA new driver install, you can easily load the saved profile from the Profiles page of nView Desktop Manager.

## About Using Saved Profiles in Another Computer

You can easily use any saved profile (.tvp file in the **Windows\nView** directory) from one computer and use it in another computer, if you want. You'll need to copy it to the **Windows\nView** directory of a computer that has the NVIDIA ForceWare graphics display driver, etc. installed properly. Then

this profile can be loaded from another computer from the nView Desktop Manager Profiles page just as it can from your original computer.

## Uninstalling the NVIDIA Display Driver Software

*Note: It is highly recommended that you follow the steps in this section to completely uninstall the NVIDIA Display Driver software before updating to a new version of the software.*

To uninstall the nView software, follow these steps:

- 1 From the Windows taskbar, click **Start > Settings > Control Panel** to open the Control Panel window.
- 2 Double-click the **Add/Remove Programs** item.
- 3 Click the **NVIDIA Display Driver** item from the list.
- 4 Click **Change/Remove**.
- 5 Click **Yes** to continue.

A prompt appears asking whether you want to delete all of the saved nView profiles.

- If you click **Yes**, all of the nView software and all of your saved profiles will be deleted.
- If you click **No**, the nView software is removed, but the profile files are saved in the `Windows\nView` directory on your hard disk.

Your system now restarts.

## Installing the NVIDIA ForceWare Graphics Drivers

- 1 Follow the instructions on the NVIDIA .com Web site driver download page to locate the appropriate driver to download, based on your hardware and operating system.
- 2 Click the driver download link.  
The license agreement dialog box appears.
- 3 Click **Accept** if you accept the terms of the agreement, then either open the file or save the file to your PC and open it later.  
Opening the EXE file launches the NVIDIA InstallShield Wizard.
- 4 Follow the instructions in the NVIDIA InstallShield Wizard to complete the installation.

## NVIDIA Driver History

---

Release 160 is the latest NVIDIA driver available. [Table 3.1](#) contains a summary of some previous driver releases and the versions associated with them. Some versions listed may not have been released outside of NVIDIA.

**Table 3.1** NVIDIA Drivers for Windows

Driver	Name	Versions	Comments
Release 160	ForceWare	160.02	
Release 95	ForceWare	95.97, 96.02,97.78	
Release 90	ForceWare	91.36, 91.85,	
Release 80	ForceWare	81.67, 84.26,	
Release 75	ForceWare	77.37, 77.56	
Release 70	ForceWare	71.84, 71.89	
Release 65	ForceWare	66.77, 66.93, 67.02, 67.03, 67.66	
Release 60	ForceWare	61.76, 61.77	
Release 55	ForceWare	56.64, 56.72, 57.30	
Release 50	ForceWare	52.16, 53.04	
Release 40	Detonator FX	44.03–45.xx	
Release 40	Detonator 40	40.60–44.02	
Release 35	Detonator 35	35.60–37.80	
Release 25	Detonator 25	26.00–32.90	
Release 20	Detonator XP	21.83–23.xx	
Release 10	Detonator 3 v1x.xx	10.00–17.xx	





## A P P E N D I X



## MODE SUPPORT FOR WINDOWS

This chapter details the Windows modes supported by the Release 160 driver for NVIDIA products. It contains these sections:

- “General Mode Support Information” on page 30
- “Default Modes Supported by GPU for Windows XP” on page 31
- “Modes Supported by DACs and TV Encoders” on page 39

## General Mode Support Information

---

The NVIDIA graphics driver includes a standard list of display modes that are supported by default. These modes are listed in the section “[Default Modes Supported by GPU for Windows XP](#)” on page 31.

The actual modes available depend on the capabilities of the display. In addition, the NVIDIA graphics driver has a “dynamic EDID detection” capability and will make available *additional* modes that are listed in the display EDID, provided the graphics hardware can support it.

The NVIDIA graphics driver also supports the high resolutions available with the displays listed in [Table A.1](#) as well as the non-standard modes listed in [Table A.2](#).

**Table A.1** Modes Supported for High Resolution Displays

Display	Maximum Resolution	Hardware Requirements
Apple 30" Cinema HD Display (Dual link DVI)	2560x1600 @ 60 Hz	<ul style="list-style-type: none"> <li>All high-end NVIDIA Quadro FX graphic solutions.</li> </ul>
Dell WFP 3007 (Dual Link DVI)	2560x1600 @ 60 Hz	<ul style="list-style-type: none"> <li>All High-end NVIDIA Quadro FX graphic solutions.</li> </ul>

**Table A.2** Non-standard Modes Supported

Resolution
1680 x 1050
1366 x 768

## Default Modes Supported by GPU for Windows XP

---


This section lists the modes that are included by default in the driver INF for the following product families:

- “NVIDIA Quadro FX Family of High End GPUs” on page 32

### Understanding the Mode Format

---

Figure A.1 gives an example of how to read the mode information presented in this section.

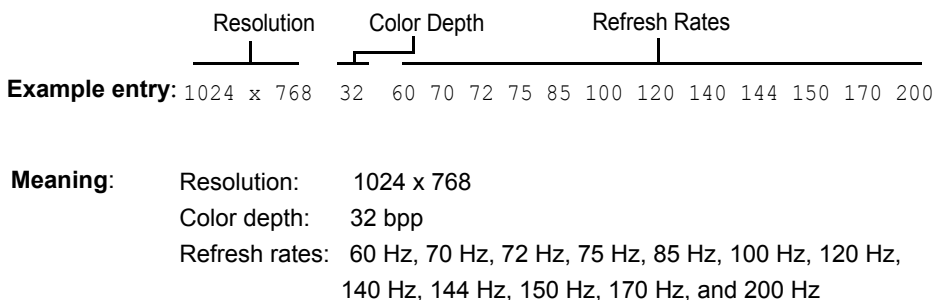

**Figure A.1** Mode Format

**Note:**

- Horizontal spanning modes of 3840x1080 and above, and vertical spanning modes of 1920x2160 and above generally require at least 32 MB of video memory at 32 bpp.
- An “i” next to the refresh rate indicates an interlaced refresh rate.

## **NVIDIA Quadro FX Family of High End GPUs**

---

This sections lists the supported display resolutions, color depths, and refresh rates for the following products:

- NVIDIA Quadro FX 5600
- NVIDIA Quadro FX 4600
- NVIDIA Quadro FX 5500
- NVIDIA Quadro FX 5500 SDI
- NVIDIA Quadro FX 4500 X2
- NVIDIA Quadro FX 4500
- NVIDIA Quadro FX 4500 SDI
- NVIDIA Quadro FX 3400 / Quadro FX 4400
- NVIDIA Quadro FX 4400G
- NVIDIA Quadro FX 4000
- NVIDIA Quadro FX 4000 SDI
- NVIDIA Quadro FX 3500
- NVIDIA Quadro FX 3450 / Quadro FX 4000 SDI
- NVIDIA Quadro FX 1500
- NVIDIA Quadro FX 1400
- NVIDIA Quadro FX 560
- NVIDIA Quadro FX 550
- NVIDIA Quadro FX 540
- NVIDIA Quadro NVS 440
- NVIDIA Quadro NVS 285

////////////////////////////////////

## Standard Modes

320 x 200	8		60 70 72 75
320 x 240	8		60 70 72 75
400 x 300	8		60 70 72 75
480 x 360	8		60 70 72 75
512 x 384	8		60 70 72 75
640 x 400	8		60 70 72 75
640 x 480	8		60 70 72 75 85 100 120 140 144 150 170 200 240
720 x 480	8		60
720 x 576	8	50	60
800 x 600	8		60 70 72 75 85 100 120 140 144 150 170 200 240
848 x 480	8		60 70 72 75 85 100 120 140 144 150 170 200 240
960 x 600	8		60 70 72 75 85 100 120 140 144 150 170 200 240
1024 x 768	8		60 70 72 75 85 100 120 140 144 150 170 200 240
1088 x 612	8		60 70 72 75 85 100 120 140 144 150 170 200 240
1152 x 864	8		60 70 72 75 85 100 120 140 144 150 170 200
1280 x 720	8		60 70 72 75 85 100 120 140 144 150 170
1280 x 768	8		60 70 72 75 85 100 120 140 144 150 170
1280 x 800	8		60 70 72 75 85 100 120 140 144 150 170
1280 x 960	8		60 70 72 75 85 100 120 140 144 150 170
1280 x 1024	8		60 70 72 75 85 100 120 140 144 150 170
1360 x 768	8		60 70 72 75 85 100 120 140 144 150 170
1600 x 900	8		60 70 72 75 85 100 120 140 144 150
1600 x 1024	8		60 70 72 75 85 100 120
1600 x 1200	8		60 70 72 75 85 100 120
1920 x 1080	8	30i	60 70 72 75 85 100
1920 x 1200	8		60 70 72 75 85 100
1920 x 1440	8		60 70 72 75 85
2048 x 1536	8		60 70 72 75 85
-----			
320 x 200	16		60 70 72 75
320 x 240	16		60 70 72 75
400 x 300	16		60 70 72 75
480 x 360	16		60 70 72 75
512 x 384	16		60 70 72 75
640 x 400	16		60 70 72 75
640 x 480	16		60 70 72 75 85 100 120 140 144 150 170 200 240
720 x 480	16		60

APPENDIX A: Mode Support for Windows Default Modes Supported by GPU for Windows

720 x 576	16		50 60
800 x 600	16		60 70 72 75 85 100 120 140 144 150 170 200 240
848 x 480	16		60 70 72 75 85 100 120 140 144 150 170 200 240
960 x 600	16		60 70 72 75 85 100 120 140 144 150 170 200 240
1024 x 768	16		60 70 72 75 85 100 120 140 144 150 170 200 240
1088 x 612	16		60 70 72 75 85 100 120 140 144 150 170 200 240
1152 x 864	16		60 70 72 75 85 100 120 140 144 150 170 200
1280 x 720	16		60 70 72 75 85 100 120 140 144 150 170
1280 x 768	16		60 70 72 75 85 100 120 140 144 150 170
1280 x 800	16		60 70 72 75 85 100 120 140 144 150 170
1280 x 960	16		60 70 72 75 85 100 120 140 144 150 170
1280 x 1024	16		60 70 72 75 85 100 120 140 144 150 170
1360 x 768	16		60 70 72 75 85 100 120 140 144 150 170
1600 x 900	16		60 70 72 75 85 100 120 140 144 150
1600 x 1024	16		60 70 72 75 85 100 120
1600 x 1200	16		60 70 72 75 85 100 120
1920 x 1080	16	30i	60 70 72 75 85 100
1920 x 1200	16		60 70 72 75 85 100
1920 x 1440	16		60 70 72 75 85
2048 x 1536	16		60 70 72 75 85

---

320 x 200	32		60 70 72 75
320 x 240	32		60 70 72 75
400 x 300	32		60 70 72 75
480 x 360	32		60 70 72 75
512 x 384	32		60 70 72 75
640 x 400	32		60 70 72 75
640 x 480	32		60 70 72 75 85 100 120 140 144 150 170 200 240
720 x 480	32		60
720 x 576	32		50 60
800 x 600	32		60 70 72 75 85 100 120 140 144 150 170 200 240
848 x 480	32		60 70 72 75 85 100 120 140 144 150 170 200 240
960 x 600	32		60 70 72 75 85 100 120 140 144 150 170 200 240
1024 x 768	32		60 70 72 75 85 100 120 140 144 150 170 200
1088 x 612	32		60 70 72 75 85 100 120 140 144 150 170 200
1152 x 864	32		60 70 72 75 85 100 120 140 144 150 170
1280 x 720	32		60 70 72 75 85 100 120 140 144 150
1280 x 768	32		60 70 72 75 85 100 120 140 144 150
1280 x 800	32		60 70 72 75 85 100 120 140 144 150

1280 x 960	32		60 70 72 75 85 100 120 140 144 150
1280 x 1024	32		60 70 72 75 85 100 120 140 144 150
1360 x 768	32		60 70 72 75 85 100 120 140 144 150
1600 x 900	32		60 70 72 75 85 100 120
1600 x 1024	32		60 70 72 75 85 100
1600 x 1200	32		60 70 72 75 85 100
1920 x 1080	32	30i	60 70 72 75 85
1920 x 1200	32		60 70 72 75 85
1920 x 1440	32		60 70 72 75 85
2048 x 1536	32		60 70 72 75 85

### Horizontal Spanning Modes

1280 x 480	8		60 70 72 75 85 100 120 140 144 150 170 200 240
1600 x 600	8		60 70 72 75 85 100 120 140 144 150 170 200 240
1696 x 480	8		60 70 72 75 85 100 120 140 144 150 170 200 240
1920 x 600	8		60 70 72 75 85 100 120 140 144 150 170 200 240
2048 x 768	8		60 70 72 75 85 100 120 140 144 150 170 200 240
2176 x 612	8		60 70 72 75 85 100 120 140 144 150 170 200 240
2304 x 864	8		60 70 72 75 85 100 120 140 144 150 170 200
2560 x 720	8		60 70 72 75 85 100 120 140 144 150 170
2560 x 768	8		60 70 72 75 85 100 120 140 144 150 170
2560 x 800	8		60 70 72 75 85 100 120 140 144 150 170
2560 x 960	8		60 70 72 75 85 100 120 140 144 150 170
2560 x 1024	8		60 70 72 75 85 100 120 140 144 150 170
2720 x 768	8		60 70 72 75 85 100 120 140 144 150 170
3200 x 900	8		60 70 72 75 85 100 120 140 144 150
3200 x 1024	8		60 70 72 75 85 100 120
3200 x 1200	8		60 70 72 75 85 100 120
3840 x 1080	8	30i	60 70 72 75 85 100
3840 x 1200	8		60 70 72 75 85 100
3840 x 1440	8		60 70 72 75 85
4096 x 1536	8		60 70 72 75 85

---

1280 x 480	16		60 70 72 75 85 100 120 140 144 150 170 200 240
1600 x 600	16		60 70 72 75 85 100 120 140 144 150 170 200 240
1696 x 480	16		60 70 72 75 85 100 120 140 144 150 170 200 240
1920 x 600	16		60 70 72 75 85 100 120 140 144 150 170 200 240

APPENDIX A: Mode Support for Windows Default Modes Supported by GPU for Windows

2048 x 768	16		60 70 72 75 85 100 120 140 144 150 170 200 240
2176 x 612	16		60 70 72 75 85 100 120 140 144 150 170 200 240
2304 x 864	16		60 70 72 75 85 100 120 140 144 150 170 200
2560 x 720	16		60 70 72 75 85 100 120 140 144 150 170
2560 x 768	16		60 70 72 75 85 100 120 140 144 150 170
2560 x 800	16		60 70 72 75 85 100 120 140 144 150 170
2560 x 960	16		60 70 72 75 85 100 120 140 144 150 170
2560 x 1024	16		60 70 72 75 85 100 120 140 144 150 170
2720 x 768	16		60 70 72 75 85 100 120 140 144 150 170
3200 x 900	16		60 70 72 75 85 100 120 140 144 150
3200 x 1024	16		60 70 72 75 85 100 120
3200 x 1200	16		60 70 72 75 85 100 120
3840 x 1080	16	30i	60 70 72 75 85 100
3840 x 1200	16		60 70 72 75 85 100
3840 x 1440	16		60 70 72 75 85
4096 x 1536	16		60 70 72 75 85

---

1280 x 480	32		60 70 72 75 85 100 120 140 144 150 170 200 240
1600 x 600	32		60 70 72 75 85 100 120 140 144 150 170 200 240
1696 x 480	32		60 70 72 75 85 100 120 140 144 150 170 200 240
1920 x 600	32		60 70 72 75 85 100 120 140 144 150 170 200 240
2048 x 768	32		60 70 72 75 85 100 120 140 144 150 170 200
2176 x 612	32		60 70 72 75 85 100 120 140 144 150 170 200
2304 x 864	32		60 70 72 75 85 100 120 140 144 150 170
2560 x 720	32		60 70 72 75 85 100 120 140 144 150
2560 x 768	32		60 70 72 75 85 100 120 140 144 150
2560 x 800	32		60 70 72 75 85 100 120 140 144 150
2560 x 960	32		60 70 72 75 85 100 120 140 144 150
2560 x 1024	32		60 70 72 75 85 100 120 140 144 150
2720 x 768	32		60 70 72 75 85 100 120 140 144 150
3200 x 900	32		60 70 72 75 85 100 120
3200 x 1024	32		60 70 72 75 85 100
3200 x 1200	32		60 70 72 75 85 100
3840 x 1080	32	30i	60 70 72 75 85
3840 x 1200	32		60 70 72 75 85
3840 x 1440	32		60 70 72 75 85
4096 x 1536	32		60 70 72 75 85



## Vertical Spanning Modes

640 x 960	8		60 70 72 75 85 100 120 140 144 150 170 200 240
800 x 1200	8		60 70 72 75 85 100 120 140 144 150 170 200 240
848 x 960	8		60 70 72 75 85 100 120 140 144 150 170 200 240
960 x 1200	8		60 70 72 75 85 100 120 140 144 150 170 200 240
1024 x 1536	8		60 70 72 75 85 100 120 140 144 150 170 200 240
1088 x 1224	8		60 70 72 75 85 100 120 140 144 150 170 200 240
1152 x 1728	8		60 70 72 75 85 100 120 140 144 150 170 200
1280 x 1440	8		60 70 72 75 85 100 120 140 144 150 170
1280 x 1536	8		60 70 72 75 85 100 120 140 144 150 170
1280 x 1600	8		60 70 72 75 85 100 120 140 144 150 170
1280 x 1920	8		60 70 72 75 85 100 120 140 144 150 170
1280 x 2048	8		60 70 72 75 85 100 120 140 144 150 170
1360 x 1536	8		60 70 72 75 85 100 120 140 144 150 170
1600 x 1800	8		60 70 72 75 85 100 120 140 144 150
1600 x 2048	8		60 70 72 75 85 100 120
1600 x 2400	8		60 70 72 75 85 100 120
1920 x 2160	8	30i	60 70 72 75 85 100
1920 x 2400	8		60 70 72 75 85 100
1920 x 2880	8		60 70 72 75 85
2048 x 3072	8		60 70 72 75 85

---

640 x 960	16		60 70 72 75 85 100 120 140 144 150 170 200 240
800 x 1200	16		60 70 72 75 85 100 120 140 144 150 170 200 240
848 x 960	16		60 70 72 75 85 100 120 140 144 150 170 200 240
960 x 1200	16		60 70 72 75 85 100 120 140 144 150 170 200 240
1024 x 1536	16		60 70 72 75 85 100 120 140 144 150 170 200 240
1088 x 1224	16		60 70 72 75 85 100 120 140 144 150 170 200 240
1152 x 1728	16		60 70 72 75 85 100 120 140 144 150 170 200
1280 x 1440	16		60 70 72 75 85 100 120 140 144 150 170
1280 x 1536	16		60 70 72 75 85 100 120 140 144 150 170
1280 x 1600	16		60 70 72 75 85 100 120 140 144 150 170
1280 x 1920	16		60 70 72 75 85 100 120 140 144 150 170
1280 x 2048	16		60 70 72 75 85 100 120 140 144 150 170
1360 x 1536	16		60 70 72 75 85 100 120 140 144 150 170
1600 x 1800	16		60 70 72 75 85 100 120 140 144 150
1600 x 2048	16		60 70 72 75 85 100 120
1600 x 2400	16		60 70 72 75 85 100 120

APPENDIX A: Mode Support for Windows Default Modes Supported by GPU for Windows

1920 x 2160	16	30i	60 70 72 75 85 100
1920 x 2400	16		60 70 72 75 85 100
1920 x 2880	16		60 70 72 75 85
2048 x 3072	16		60 70 72 75 85
-----			
640 x 960	32		60 70 72 75 85 100 120 140 144 150 170 200 240
800 x 1200	32		60 70 72 75 85 100 120 140 144 150 170 200 240
848 x 960	32		60 70 72 75 85 100 120 140 144 150 170 200 240
960 x 1200	32		60 70 72 75 85 100 120 140 144 150 170 200 240
1024 x 1536	32		60 70 72 75 85 100 120 140 144 150 170 200
1088 x 1224	32		60 70 72 75 85 100 120 140 144 150 170 200
1152 x 1728	32		60 70 72 75 85 100 120 140 144 150 170
1280 x 1440	32		60 70 72 75 85 100 120 140 144 150
1280 x 1536	32		60 70 72 75 85 100 120 140 144 150
1280 x 1600	32		60 70 72 75 85 100 120 140 144 150
1280 x 1920	32		60 70 72 75 85 100 120 140 144 150
1280 x 2048	32		60 70 72 75 85 100 120 140 144 150
1360 x 1536	32		60 70 72 75 85 100 120 140 144 150
1600 x 1800	32		60 70 72 75 85 100 120
1600 x 2048	32		60 70 72 75 85 100
1600 x 2400	32		60 70 72 75 85 100
1920 x 2160	32	30i	60 70 72 75 85
1920 x 2400	32		60 70 72 75 85
1920 x 2880	32		60 70 72 75 85
2048 x 3072	32		60 70 72 75 85

## Modes Supported by DACs and TV Encoders

This section lists the supported modes and formats for the following:

- “External DAC Mode Support” on page 39
- “TV-Out Mode Support” on page 40

### External DAC Mode Support

#### Fairchild FMS3815 Modes Supported

Table A.3 shows the refresh rates for various resolutions of the Fairchild FMS3815 external DAC, which is commonly used on GeForce2 MX and Quadro2 MXR boards to drive a secondary CRT.

**Table A.3** External DAC Modes (Fairchild FMS3815)

Resolution	Supported Rates (Hz)
640x480	60, 70, 72, 75, 85, 100, 120, 140, 144, 150, 170
800x600	60, 70, 72, 75, 85, 100, 120, 140, 144, 150, 170
1024x768	60, 70, 72, 75, 85, 100, 120
1152x864	60, 70, 72, 75, 85
1280x720	60, 70, 72, 75, 85, 100
1280x960	60, 70, 72, 75
1280x1024	60, 70, 72, 75
1360x768	60, 70, 72, 75, 85
1600x900	60, 70
1600x1200	—

#### Analog Devices ADV-7123 Modes Supported

Table A.4 shows the refresh rates for various resolutions of the Analog Devices ADV-7123 external DAC, which is commonly used on the GeForce2 MX and the Quadro2 MXR boards to drive a secondary CRT.

**Table A.4** External DAC Modes (Analog Devices ADV-7123)

Resolution	Supported Rates (Hz)
640x480	60, 70, 72, 75, 85, 100, 120, 140, 144, 150, 170
800x600	60, 70, 72, 75, 85, 100, 120, 140, 144, 150, 170
1024x768	60, 70, 72, 75, 85, 100, 120
1152x864	60, 70, 72, 75, 85, 100
1280x720	60, 70, 72, 75, 85, 100
1280x960	60, 70, 72, 75, 85, 90

**Table A.4** External DAC Modes (Analog Devices ADV-7123) (continued)

Resolution	Supported Rates (Hz)
1280x1024	60, 70, 72, 75, 85
1360x768	60, 70, 72, 75, 85, 100
1600x900	60, 70, 75
1600x1200	—

## TV-Out Mode Support

Table A.5 and Table A.6 list the NTSC, PAL, and HDTV TV-Out modes supported by the NVIDIA driver.

**Table A.5** Mode Support for S-Video and Composite Out

Resolution	Bit depth	Comments
320x200	8, 16, 32	DirectDraw mode; not selectable as a Windows desktop
320x240	8, 16, 32	DirectDraw mode; not selectable as a Windows desktop
640x400	8, 16, 32	DirectDraw mode; not selectable as a Windows desktop
640x480	8, 16, 32	
720x480	8, 16, 32	Overscans (for video)
720x576	8, 16, 32	Overscans (for video)
800x600	8, 16, 32	
1024x768	8, 16, 32	Conexant 25871 only

**Table A.6** Mode Support for Component YPrPb Out and DVI Out

Resolution	Comments
480i (SDTV)	Supported on graphics boards with Conexant 875 or Philips 7108 TV encoders and compatible connectors, and compatible GeForce 6 Series and GeForce 7 Series GPUs.
480p (EDTV)	
720p (HDTV)	
1080i (HDTV)	
576i (PAL)	
576p (PAL)	

The driver supports manual overscan correction for component and DVI outputs. See the *ForceWare Graphics Driver User's Guide* for instructions on how to use the overscan correction features in the control panel.